
BRIGHT SOURCE

Harriot

Made in Britain

INSTALLATION GUIDE:

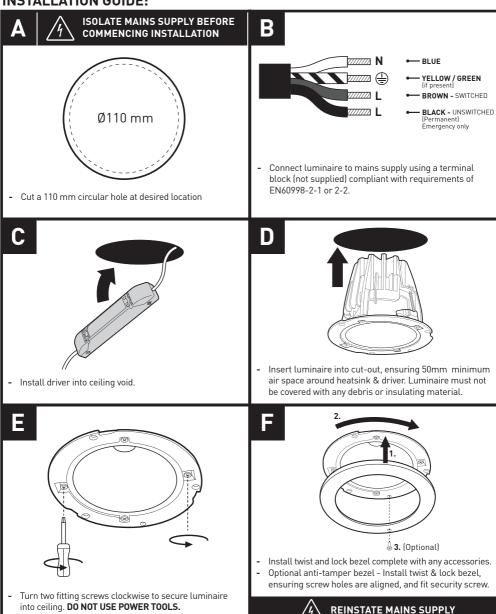

We reserve the right to amend any product specification without prior notice. This luminaire has been specifically designed for optimum performance. Any alterations made to the luminaire may affect life and light output and will invalidate any warranty. Luminaire complies with the requirements of BS EN 60598.

INSTALLATION GUIDE:

IMPORTANT:

The luminaire must not be covered by any debris or heat insulating material. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IEE wiring regulations BS 7671. Photobiological safety is not assured if the LED module is lit up without the cover. Direct exposure to blue LED light is dangerous for the eyes.






PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND RECYCLE PACKAGING.







Cut a Ø140mm circular hole at the desired location using a holesaw.

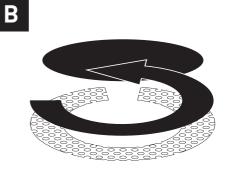

Feed the mesh up into ceiling void.

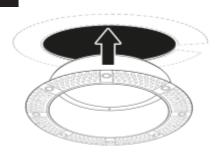


Fit the plaster-in collar into the hole.

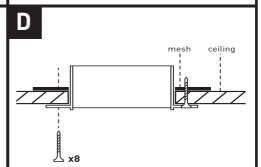

Use a hand to hold the mesh down whilst fixing the collar in place with drywall screws. All eight screws must be used to avoid risk of the plaster cracking.

TAKE CARE TO AVOID FINGERS WHEN FIXING THE SCREWS

- Plaster the ceiling upto the edge of the collar. When dry and painted, offer the fitting up to the collar.
- 2 Use the three pips in the collar to correctly position the fitting.
- Please refer to the product specific installation guide for detailed information on installing the luminaire.

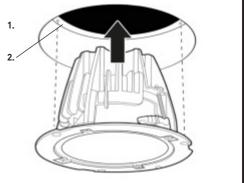

We reserve the right to amend any product specification without prior notice. This luminaire has been specifically designed for optimum thermal and optical performance Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies to the requirements of BS EN 60598.

The luminaire must not be covered by any debris or insulating material. Ensure there is a minimum of 50 mm airspace around the luminaire and control gear. Electrical termination must be carried out by a qualified electrician in accordance with the latest edition of IFE wiring regulations BS7871.

IP65 BEZEL

 


PLEASE RETAIN THIS GUIDE FOR FUTURE REFERENCE AND





 Cut a 110 mm circular hole at the desired location using a holesaw



- Connect the luminaire to the mains supply using a terminal block (not supplied) compliant with the requirements of EN60998-2-1 or 2-2.
- Install the driver into the ceiling void, ensuring it is not covered by any debris or insulating material.

C




- Offer the luminaire into the ceiling void without using the rubber gasket. If there is a risk of the heatsink being covered, please insert a yellow cap into the top of the luminaire.
- Turn the 2 fixing screws clockwise to secure, leaving a 5 mm gap off the ceiling. DO NOT USE POWER TOOLS.






 Stretch the rubber gasket over and behind the lip of the luminaire, ensuring the gasket lip is facing downwards and that the 3 holes in the gasket are aligned to the 3 holes on the luminaire as shown.

Ε

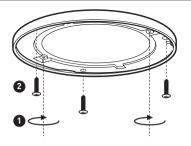

- Re-tighten the 2 fixing screws (1) until luminaire is secure. Please ensure these screws are set to a torque setting of between 0.4 - 0.5 Nm.
- Using the screws supplied (2), screw the gasket to the luminaire via the 3 aligned holes until secure to ceiling.

 F



- Remove film from both sides of polycarbonate lens and locate with rubber seal behind the twist and lock bezel (1).
- Install the twist and lock bezel, ensuring the rubber gasket lip is not trapped and is around the bezel (2,3).

REINSTATE MAINS SUPPLY

We reserve the right to amend any product specification without prior notice. Any alterations made to the luminaire may affect life and light output and invalidate any warranty. Luminaire complies with all safety standards set out in BS EN 60598.